

A/V Instructions: A121



Item Storage

The room has a gray box with a DVD player, remote, and 2 HDMI cable: a short one to use with the DVD player, and a long one to use to plug in a laptop or tablet.



Power

Use the TV remote (mounted on the wall near the TV) to turn on the TV.



Screens

The room has a single TV fed by a single HDMI input on the wall plate below. Do not use remote to adjust any TV inputs or settings. Do not adjust anything else (aspect ratio, input) on the TVs. Just use the remote to turn on/off and adjust volume.



Connecting Devices

Use the long HDMI cable to connect your device to the wall plate below the center TV.



DVD Player

The room is equipped with a DVD player. Use the included HDMI cable to plug it into the wall plate below the TV. Use the DVD remote to turn it on and operate the device.



Volume and Sound

Volume is controlled by the TV remote.



Checklist for Turning Off and Shutting Down



Remove DVD from player (if used).



Disconnect device(s) and put cables back.



Turn off TV.



Put DVD player, remote, and HDMI cables back in gray box. Put TV remote back in holder.